

# U-Anchor 2000 w/ Membrane Attachment Ring

## Installation Instructions:


*\*These instructions are for PVC, TPO, and KEE mechanically attached or fully adhered roof systems.*

### Before You Start:


Inspect the existing roof with a qualified professional to ensure that it is in good condition and meets local codes and manufacturer's warranty requirements. Weldability of the membrane should be verified when determining the suitability of the roof.

### Layout:


Appropriate frequency and spacing of the attachment points should be determined by a qualified professional for seismic requirements, compressive strength of the roofing assembly, structural load capacity, and local building code requirements. Installation should be done by a qualified professional to maintain roof warranty requirements. Installation should be done by a qualified professional to maintain roof warranty requirements. Convey the designed layout onto the roof surface, creating crosshatches. Pair the alignment marks on each side of the U-Anchor with the crosshatches previously prepared on the roof surface. Clean the surface where U-Anchor 2000 will be adhered to the roof with a manufacturer approved cleaner.

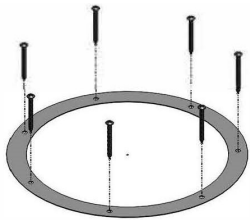

**Step 1:** Once properly aligned, install the attachment ring to the roof surface with approved fasteners.

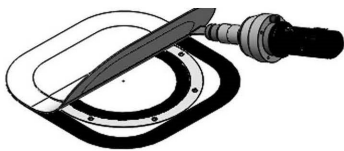

**Step 2:** A continuous 1" weld is required around the interior diameter of the ring.

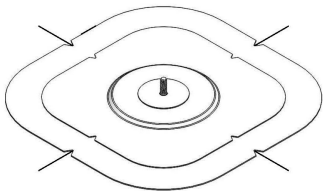

**Step 3:** Hot air weld the perimeter edge of the target to the corresponding roof surface with a 2" wide weld. Apply seam sealant, if needed, in accordance with roof manufacturer's instructions.

*(Prior to adhering the Anchor mount into place, be sure the placement is accurate)*

Install ancillary components using a stainless steel 3/8"-16 nut and lock washer. The recommended torque for the U-Anchor 2000 is 20\25 ft lbs.

