

U-Anchor 2000 EPDM

Installation Instructions:

**These instructions are for EPDM mechanically attached or fully adhered roof systems.*


**The U-Anchor 2000 EPDM is made with TPO membrane.*

Before You Start:


Inspect the existing roof with a qualified professional to ensure that it is in good condition and meets local codes and manufacturer's warranty requirements.

Layout:

Appropriate frequency and spacing of the attachment points should be determined by a qualified professional for seismic requirements, compressive strength of the roofing assembly, structural load capacity, and local building code requirements. Use a chalk line (blue non-permanent chalk) to convey designed layout on each side of the U-Anchor 2000 with the crosshatches previously prepared on the surface. Clean the surface where U-Anchor 2000 will be adhered to the roof with a manufacturer approved cleaner.

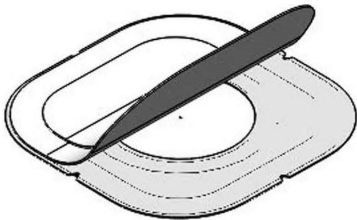

Step 1: Once properly aligned, install the double sided adhesive tape and with the roller, roll the surface down.

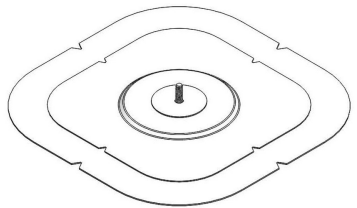

Step 2: Clean the bottom side of the anchor. Peel the top layer of the tape off and install the anchor over it.



Step 3: Roll the surface of the anchor in accordance with the roof manufacturer's instructions.

(Prior to adhering the Anchor mount into place, be sure the placement is accurate)

Install ancillary components using a stainless steel 3/8"-16 nut and lock washer. The recommended torque for the U-Anchor 2000 is 20\25 ft lbs.

