


U-ANCHOR INSTALLATION

U1200-Plate Only

The following instructions are meant to be utilized by an experienced and professional roofing contractor using the proper equipment, techniques, and safety protocols – not just the average handyman. Each installation should always follow the specified roofing manufacturer's written specification.

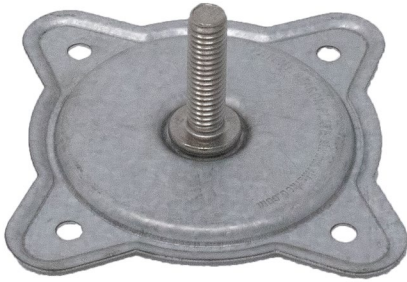

U1200



STEP 1

Align the U-Anchor plate according to the engineered design. Most designs are transferred to the roof surface with chalk lines.

**Avoid using Permanent chalk - such as red chalk.*



STEP 2

Install the U-Anchor Plate using the correct type and quantity of fasteners specified by your design professional.

Finally, flash the U-Anchor Plate using the manufacturer recommended method.

